


FTCS-N1/2A4P-2AP8X-H1140 Flow Monitoring – Immersion Sensor with Integrated Processor

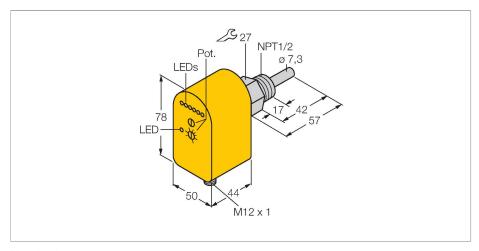


Technical data


ID	6870036
Туре	FTCS-N1/2A4P-2AP8X-H1140
Mounting conditions	Immersion sensor
Water Operating Range	1150 cm/s
Oil Operating Range	3300 cm/s
Stand-by time	typ. 8 s (215 s)
Switch-on time	typ. 2 s (115 s)
Switch-off time	typ. 2 s (115 s)
Temperature jump, response time	max. 12 s
Temperature gradient	≤ 250 K/min
Medium temperature	-20+80 °C
Electrical data	
Operating voltage U _B	19.228.8 VDC
Current consumption	≤ 60 mA
Output function	PNP, 2 x NO contact
Rated operational current	0.2 A
Voltage drop at I _e	≤ 1.5 V
Short-circuit protection	yes
Reverse polarity protection	yes
Protection class	IP67
Mechanical data	
Design	Immersion
Housing material	Plastic, PBT
Sensor material	Stainless steel, 1.4571 (AISI 316Ti)
Max. tightening torque of housing nut	30 Nm
Electrical connection	Connector, M12 × 1

Features

- ■Sensor for liquid media
- ■Calorimetric principle
- Adjustment via potentiometer
- Status indicated via LED chain
- ■Temperature monitoring, 0...+80 °C
- ■2 independent switching outputs: S1: Flow monitoring, S2: Temperature monitoring
- ■DC 4-wire, 21...26 VDC
- ■NO contact, PNP output
- ■Connector device, M12 × 1

Wiring diagram

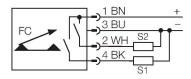

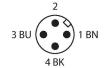

Functional principle

The function of immersion flow sensors is based on the thermodynamic principle. The sensor is heated up by a few degrees Celsius compared to the flow medium. If the medium flows past the sensor, the heat generated in the sensor is dissipated. The resulting temperature is measured and compared with the temperature of the medium. The flow condition of each medium can be derived from the temperature difference obtained. Thus, TURCK flow sensors reliably and wear-free monitor the flow of liquid or gaseous media.



Technical data

Pressure resistance	100 bar
Process connection	1/2" NPT
Switching state	LED chain, Green/yellow/red
Flow state display	LED chain
Indication: Drop below setpoint	LED Red
Indication: Setpoint reached	LED Yellow
Indication: Setpoint exceeded	LED Green