


# BIM-UNT-AP6X/3GD 7M Magnetic Field Sensor – For Pneumatic Cylinders

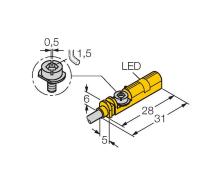


#### Technical data

| Туре   | BIM-UNT-AP6X/3GD 7M                                       |
|--|---|
| ID   | 4685737   |
| General data                                 |   |
| Pass speed                                   | ≤ 10 m/s  |
| Repeatability                                | ≤ ± 0.1 mm  |
| Temperature drift                            | ≤ 0.1 mm  |
| Hysteresis                                   | ≤ 1 mm  |
| Electrical data                              |   |
| Operating voltage $U_{\scriptscriptstyle B}$ | 1030 VDC  |
| Ripple U <sub>ss</sub>                       | ≤ 10 % U <sub>Bmax</sub>                                  |
| DC rated operating current I.                | ≤ 100 mA  |
| No-load current                              | ≤ 15 mA   |
| Residual current                             | ≤ 0.1 mA  |
| Isolation test voltage                       | 0.5 kV  |
| Short-circuit protection                     | yes/Cyclic  |
| Voltage drop at I <sub>e</sub>               | ≤ 1.8 V   |
| Wire break/reverse polarity protection       | yes/Complete  |
| Output function                              | 3-wire, NO contact, PNP                                   |
| Switching frequency                          | 1 kHz   |
| Approval acc. to                             | ATEX declaration of conformity TURCK<br>Ex-07001M X       |
| Device marking                               | EX II 3 G Ex ec IIC T4 Gc/II 3 D Ex tc IIIC<br>T110 °C Dc |
| Mechanical data                              |   |
| Design                                       | Rectangular, UNT  |
| Dimensions                                   | 28 x 5 x 6 mm   |
| Housing material                             | Plastic, PP   |
| Active area material                         | Plastic, PP   |
|  |   |

#### Features

- For T-groove cylinders without mounting accessories
- Optional accessories for mounting on other cylinder designs
- One-hand mounting possible
- Stable mounting
- Magneto-resistive sensor
- DC 3-wire, 10...30 VDC
- NO contact, PNP output
- Cable connection
- ■ATEX category II 3 G, Ex zone 2
- ■ATEX category II 3 D, Ex zone 22

## Wiring diagram

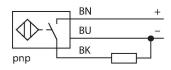

# Functional principle

Magnetic field sensors are activated by magnetic fields and are used, in particular, for the detection of the piston position in pneumatic cylinders. As magnetic fields can permeate non-magnetizable metals, they detect a permanent magnet attached to the piston through the aluminium cylinder wall.





### Technical data


| Tightening torque fixing screw     | 0.4 Nm   |
|------------------------------------|--|
| Electrical connection              | Cable  |
| Cable quality                      | Ø 3 mm, Gray, Lif9Y-11Y, PUR, 7 m  |
|                                    | Suited for E-ChainSystems® acc. to man-<br>ufacturers declaration H1063M |
| Core cross-section                 | 3 x 0.14 mm <sup>2</sup>   |
| Environmental conditions           |  |
| Ambient temperature                | -25+70 °C  |
|                                    | For explosion hazardous areas see in-<br>struction leaflet               |
| Vibration resistance               | 55 Hz (1 mm)   |
| Shock resistance                   | 30 g (11 ms)   |
| Protection class                   | IP68   |
| MTTF                               | 2283 years acc. to SN 29500 (Ed. 99) 40<br>°C                            |
| Mounting on the following profiles |  |
| Cylindrical design                 |  |
| Switching state                    | LED, Yellow  |
| Included in delivery               | cable clip   |
|                                    |  |

## Mounting instructions

#### Mounting instructions/Description

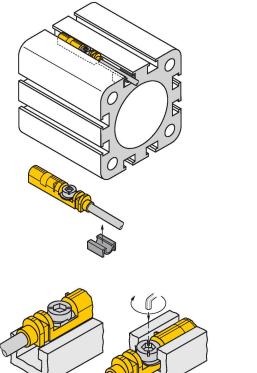

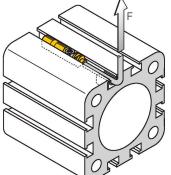


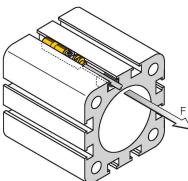

Thanks to the mounting lip, the sensor can be inserted into the groove from above with one hand. Mount the sensors as follows using the patented wing screw: The wing screw and the female thread feature a lefthand thread. Two small plastic lips keep the screw in position, ready-to-install. Turn the screw clockwise. The screw moves out of the thread and hits the upper grooves with the wings. The sensor is thus pressed down and locked in position. A few degrees up to approximately 1.5 turns of the screw with a slotted screwdriver (blade width 0.5 mm) or a 1.5 mm Allen key are sufficient to ensure vibration-proof fastening, depending on the shape of the slot. A tightening torque of 0.4 Nm is sufficient for safe mounting without damaging the cylinder. The sensor can now withstand an axial and radial tensile load of F=100N applied on the cable. A cable clip is included in the scope of delivery. It enables smooth cable routing in the groove and ensures that the cable is fastened as securely as possible. The corresponding accessories for mounting on other cylindrical housings must be ordered separately.




#### Accessories

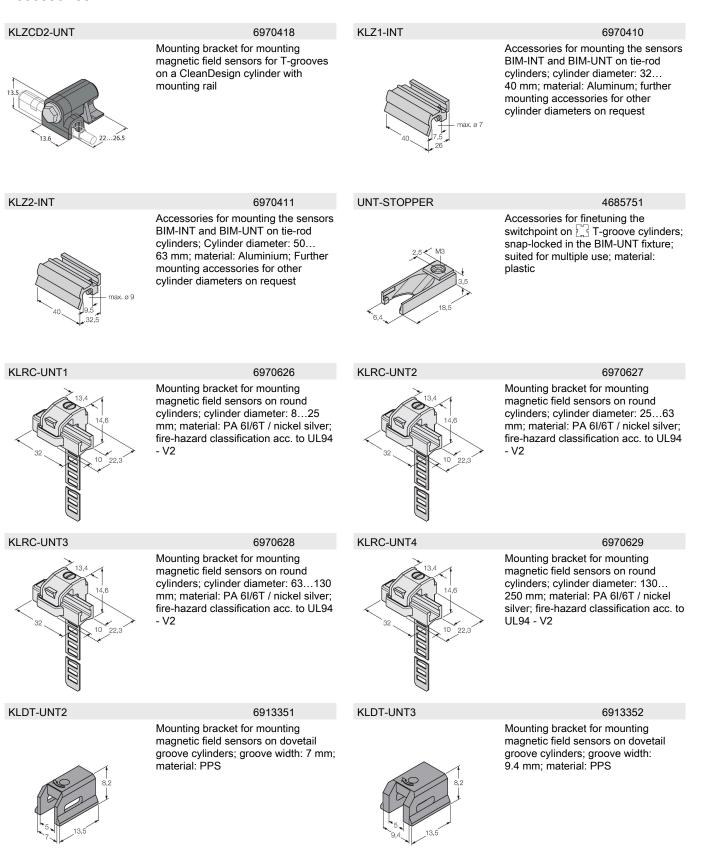



#### KLDT-UNT6

6913355

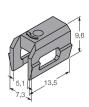

Mounting bracket for mounting magnetic field sensors on dovetail groove cylinders; groove width: 7.35 mm; material: PPS



## Instructions for use

| Intended use   | This device complies with Directive 2014/34/EU and is suit-<br>able for use in explosion-hazardous areas acc. to EN IEC<br>60079-0:2018, EN IEC 60079-7:2015+A1:2018 and EN<br>60079-31:2014.In order to ensure correct operation to the in-<br>tended purpose it is required to observe the national regula-<br>tions and directives.   |
|--|--|
| For use in explosion hazardous areas conform to classification | II 3 G and II 3 D (Group II, Category 3 G, electrical equipment<br>for gaseous atmospheres and category 3 D, electrical equip-<br>ment for dust atmospheres).  |
| Marking (see device or technical data sheet)                   | ⓑ II 3 G Ex ec IIC T4 Gc/II 3 D Ex tc IIIC T110 °C Dc  |
| Local admissible ambient temperature                           | -25+55 °C  |
| Installation/Commissioning                                     | These devices may only be installed, connected and oper-<br>ated by trained and qualified staff. Qualified staff must have<br>knowledge of protection classes, directives and regulations<br>concerning electrical equipment designed for use in explosion<br>hazardous areas.Please verify that the classification and the<br>marking on the device comply with the actual application con-<br>ditions.   |
| Installation and mounting instructions                         | Avoid static charging of cables and plastic devices. Please<br>only clean the device with a damp cloth. Do not install the<br>device in a dust flow and avoid build-up of dust deposits on<br>the device. If the devices and the cable could be subject to<br>mechanical damage, they must be protected accordingly.<br>They must also be shielded against strong electro-magnetic<br>fields. The pin configuration and the electrical specifications<br>can be taken from the device marking or the technical data<br>sheet. In order to avoid contamination of the device, please re-<br>move possible blanking plugs of the cable glands or connec-<br>tors only shortly before inserting the cable or opening the ca-<br>ble socket.   |
| Special conditions for safe operation                          | Devices with terminal chamber (cable glands) have a weak-<br>er strain relief. Sufficient strain relief must be ensured or the<br>cable must be stationary-mounted.Do not disconnect the<br>plug-in connection or cable under voltage.Please attach a<br>warning label permanently in an appropriate fashion in close<br>proximity to the plug-in connection with the following inscrip-<br>tion: Nicht unter Spannung trennen / Do not separate when<br>energized.The device must be protected against any kind<br>of mechanical damage and degrading UV-radiation. This is<br>achieved through mounting in a standard T groove of a pneu-<br>matic cylinder.Load voltage and operating voltage of this<br>equipment must be supplied from power supplies with safe<br>isolation (IEC 30 364/UL508), to ensure that the rated volt-<br>age of the equipment (24 VDC +20% = 28.8 VDC) is never ex-<br>ceeded by more than 40%. |
| Service/Maintenance  | Repairs are not possible. The approval expires if the device is repaired or modified by a person other than the manufacturer. The most important data from the approval are listed.  |